

WARNING!



The use of a bowline knot to tow can **reduce** your tow rope strength by up to **75%**

After advice from our rope manufacturer the method below should be used to tow parasails


Fly Safe

The safest way to tow your parasail is to splice your tow line and use a Quick Link to attach your parasail to the tow line



Splice

Splicing **does not** reduce the strength of your rope

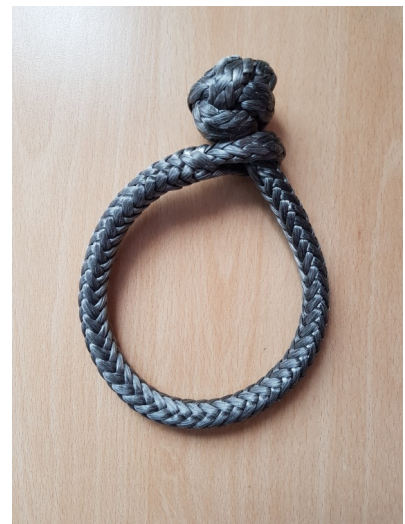

Quick Link
(Soft Shackle)

A Quick Link should have a minimum breaking strength of 3500kg.

If you require a Quick Link please contact us